

MANUFACTURED AFTER JULY 1, 1985

MAINTENANCE & SERVICE INFORMATION

uality Misches and Eine Vacht Geo



LIMITED WARRANTY

99.101

I.M.I. Barient. Inc. warrants each piece of equipment to be tree from defects in materials and workmanship for a period of one year from date of purchase. Any part which proves to be defective in the normal use of the equipment will be replaced without charge. This warranty does not apply to damage resulting from accident, neglect, or missays, including repears or alteriations made by firms other than I.M.I. Barient Inc. or its authorized representatives. I.M.I. Barient, Inc. reserves the right to alter specifications without notice.

IMI BARIENT, INC. 1690 E. St. Gertrude Pt. Santa Ana, CA 92705 Tel: (714) 567 8104

IMI BARIENT, INC. New Whitfield St., Guildford, CT 08437 Tel: (203) 463 4374 IMI BARIENT, INC. 3703D 1314 Ave. N, Clearwater, FL 33520 Tel: (813) 507 9500 BARIENT SPARORAFT FRANCE Zone industrial de Perigny, 17027 Le Rochelle, FRANCE Tel: (48) 44 1665 Fax: (46) 41 7860


CS BARIENT-SPANDRAST Waterioo Road, Lymington, Hante, U.N. 804 (Tel.: (5906) 77714 Fax: (5906) 79932


New ZEALAND
Kini Yachting Consultants
23-85 Fremin Pt.
Avondals
Auckland, New Zealand
Tel: 881-582
Fax: A82-386

Barient Australia Pty. Ltd. 52 Wentworth St., Granville, NSW 2142 Tel: (02) 637 9333 Fax: 637 9323

MAINTENANCE & SERVICE INFORMATION


MODEL 8P 1-SPEED WINCH

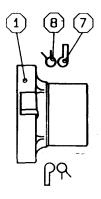


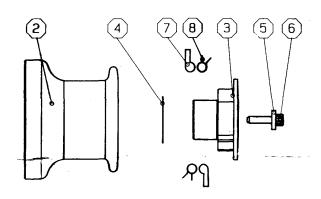






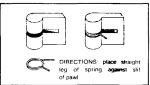

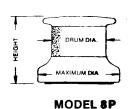

	1st	2nd
GEAR RATIO	1:1	
POWER RATIO	7.9:1	_
DRUM DIA. MAXIMUM DIA. HEIGHT	63mm 93mm 81mm	2 ¹ / ₂ " 3 ¹¹ / ₁₆ " 3 ³ / ₁₆ "

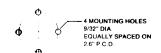

MOUNTING INSTRUCTIONS

- 1. Using a 3/16" Allen key, remove the capscrew (6) from top cap (3).
- 2. Lift the drum (3) and top cap (4) together from the base (1).
- Bolt the base (1) to flat and smooth surface drilled to take four flat head bolts 1/4" (6 mm)
 dia. on 2.600" (66 mm) bolt circle dia. Use base (1) as a template. Apply only light coat of
 bedding (sealing) compound to seal the base to the deck.
- 4. Slide the drum top cap assembly together over the base (1).
- 5. Firmly tighten the capscrew (6) in the top cap (3).

TO LUBRICATE & DISASSEMBLE:

Note: It is not necessary to remove the base (1) from the deck to lubricate this winch.

- Dismantle as step 1 and 2 above.
- 2. Separate the top cap (3) from drum (2).
- 3. Remove ratchet pawls (7) and springs (8) from top cap (3) and base (1).
- 4. Clean all parts in petroleum solvent. Replace any parts showing damage or excessive wear. During the assembly procedure, the inside of drum (2) should be liberally greased with Barlube grease. The pawls should be lubricated with machine oil only NEVER grease the pawls and springs.
- To assemble reverse dismantling procedure and steps 4, 5 under Mounting Instructions.

SELF ROPE HOLDING — TRIMMING:

A feature of this winch is its unique tailing and self rope holding ability under load. The winch may be used by one person only. To operate: utilize the full height of the drum barrel, using enough turns of rope until it jams underside of top flange of the drum (see fig. 1). As winding progresses, free the tail end of rope from underside of top flange. Do not allow the tail end to advance further than one turn.

TOOL REQUIRED: 3/16" Allen key.

LUBRICANT: Non detergent Machine Oil (SAE 30); Barient Barlube.

INSPECTION & LUBRICATION:

Quarterly lubrication is recommended. Inspect more frequently in a racing season. Monthly cleaning and lubrication of the aluminium drum winches is advisable.

