



The clew outhaul rides on an adjustable car.
To power up adjust the fore and aft position
so the clew outhaul control line, extended
straight, intersects the mid point of the luff.
Or, to open up the top of the leech, move it aft.